






Light duty, pins - ball

Part Number

**3104001406001**

Tipping weight

**11-18 ton**

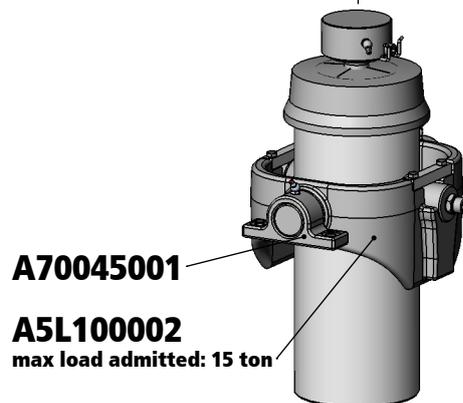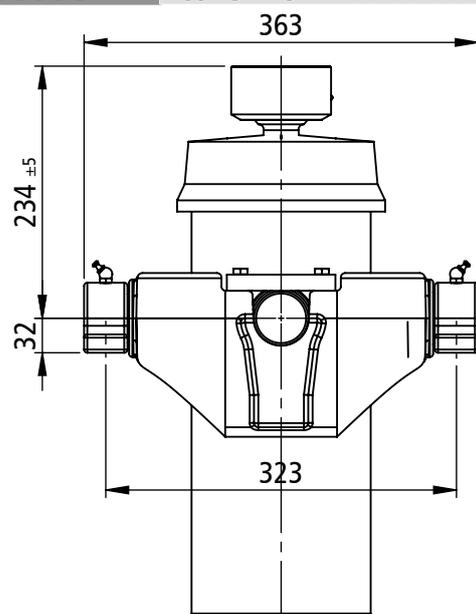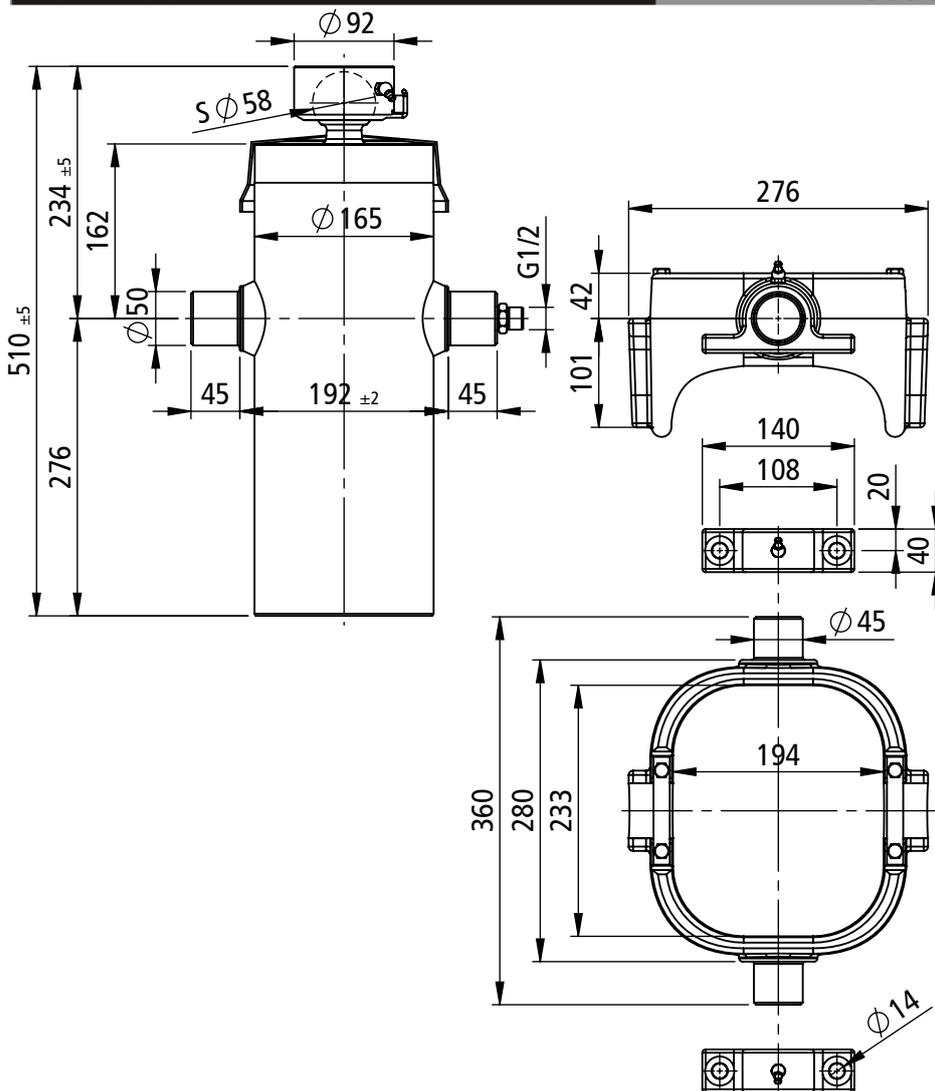

**A70045001**

**A5L100002**

max load admitted: 15 ton

mounting dimension	<b>234 mm + 20 mm min pull out</b>	total stroke	<b>1950 mm</b>	max pressure	<b>180 bar</b>
model: BL400 1950 140 6	code: 3104001406001	weight:	<b>61 kg</b>	<b>HS Penta</b>	

<b>extension</b>	1	2	3	4	5	6	-	-	-	--	--	<b>number of stages: 6</b>
<b>diameter [mm]</b>	140	120	105	90	75	60	--	--	--	--	--	
<b>stroke [mm]</b>	333	330	330	316	319	322	--	--	--	--	--	<b>total: 1950 mm</b>
<b>thrust [kN]</b>	277	204	156	115	80	51	--	--	--	--	--	<b>max thrust admitted: 105 kN</b>
<b>oil [dm³]</b>	5.1	3.7	2.9	2.0	1.4	0.9	--	--	--	--	--	<b>total: 16.0 dm³</b>

### TECHNICAL NOTES AND SPECIFICATIONS

- The normal application of telescopic cylinder is to lift up tipping bodies, loaded with different materials, and consequently discharge this material whilst the cylinder is extended all along its stroke.
- The body weight plus the max payload are the max tipping weight that can be raised by the cylinder. This value, calculated at the max pressure, is a rough indication of the tipping power of the cylinder and must be used as a first criteria for the selection of the cylinder. The real tipping mass can only be calculated by the design engineer of the dump truck, and must take into account the geometry of the dump body and operating conditions. Never exceed the maximum thrust.
- Never exceed maximum pressure.
- The cylinder has been designed for loads along the longitudinal axis: the cylinder is a lifting device only and may not be used as structural member or be subject to side load.
- The ordinary use of telescopic cylinder does not require any coating as the telescopic stages are exposed to atmospheric agents only during the tip-up operation. Therefore telescopic cylinders will be supplied without any coating in absence of any specific requirements.
- H.S.PENTA warranty does not apply to any kind of corrosion of coated or non-coated parts. See terms of warranty.
- Maximum extension speed less than 0.2 m/s.
- Hydraulic oil temperature admitted between -40°C and +100°C.
- In case the cylinders must be stored, do not remove the package. Store them in a dry place, not exposed to rain. Do not store the cylinders for more than 6 (six) months.
- Further specifications see mounting instructions, hydraulic oil specification sheet, user & maintenance manual.

#### REMARKS

[2011.06.23] [2011.06.23]

#### REVISIONS

2012.12.17 - Inserito bilanciare e supporti

01

02

03

04

# TECHNICAL DATA




Light duty cylinder, ball - pins

Part Number

**3104001406001**

Tipping weight

**11-18 ton**

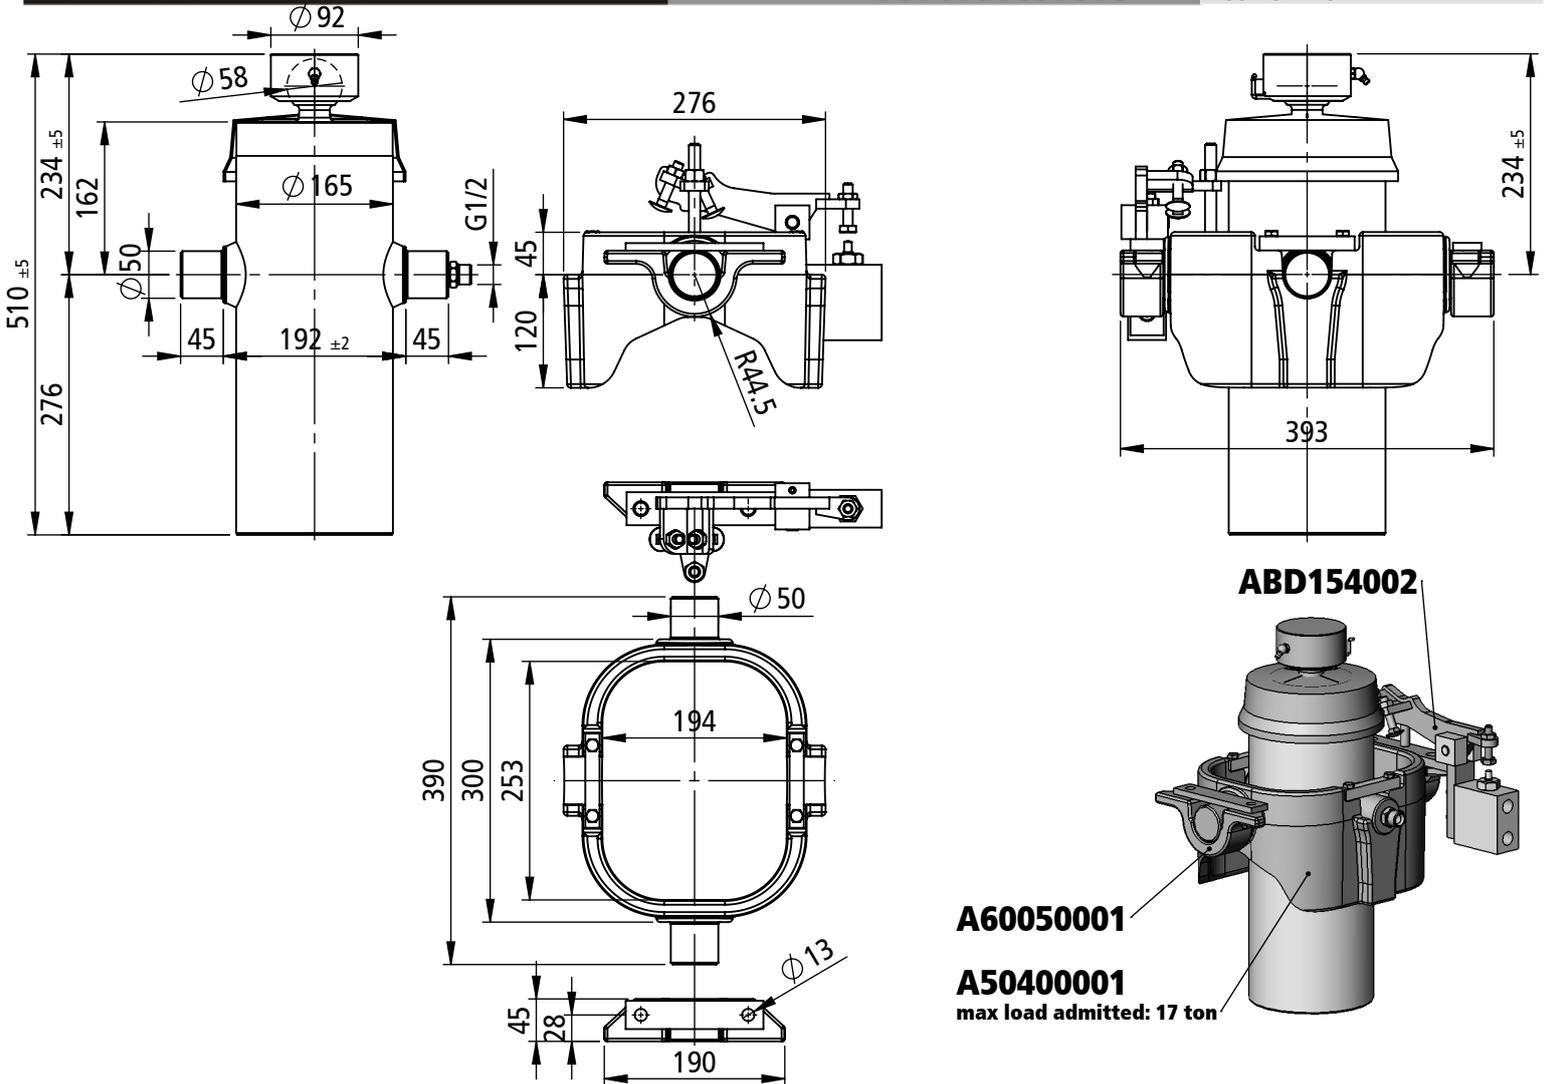

mounting dimension	<b>234 mm + 20 (-5;+30) mm min pull out</b>	total stroke	<b>1950 mm</b>	max pressure	<b>180 bar</b>
model:	<b>BL400 1950 140 6</b>	code:	<b>3104001406001</b>	weight:	<b>61 kg</b>
					<b>HS Penta</b>

<b>extension</b>	1	2	3	4	5	6	-	-	-	--	--	<b>number of stages: 6</b>
<b>diameter [mm]</b>	140	120	105	90	75	60	--	--	--	--	--	
<b>stroke [mm]</b>	333	330	330	316	319	322	--	--	--	--	--	<b>total: 1950 mm</b>
<b>thrust [kN] at pmax</b>	277	204	156	115	80	51	--	--	--	--	--	<b>max admitted thrust: 105 kN</b>
<b>oil [dm³]</b>	5.1	3.7	2.9	2.0	1.4	0.9	--	--	--	--	--	<b>total: 16.0 dm³</b>

## TECHNICAL NOTES AND SPECIFICATIONS

**User responsibility.** Incorrect selection or incorrect use of the here described component and its related items may cause death, personal injury and property damage. All the information here reported are intended for further investigations by users with technical knowledge. The user, as manufacturer of the completed machinery which will incorporate the here described components, is the solely responsible for the final selection of the components. The user must carry out necessary research and tests on components to determine whether, by its design and construction, all performance, endurance, maintenance, safety and warning requirements are met. The user must assure the compliance of the completed machinery with all appropriate laws, directives, norms, industry standards.

The normal application of telescopic cylinder is to lift up tipping bodies, loaded with different materials, and consequently discharge this material whilst the cylinder is extended all along its stroke.

The cylinder has been designed to provide only a linear pushing force. The cylinder is not a structural member and must not be used as a stabilizer or be subject to side or pulling load. The cylinder will not prevent the dump body or trailer from rollover or lateral tilt.

The body weight plus the max payload are the max tipping weight that can be raised by the cylinder. This value, calculated at the max pressure, is a rough indication of the tipping power of the cylinder and must be used as a first criteria for the selection of the cylinder. The real tipping mass can only be calculated by the design engineer of the completed machinery, and must take into account the geometry of the dump body, operating conditions and all reasonably foreseeable uses.

Refer to [www.hspenta.it](http://www.hspenta.it) for mounting instructions, bracket details, hydraulic oil specification, user & maintenance, service, general precautions, general guarantee conditions.

**Never exceed the herein specified limits of the cylinder.**

Cylinder rated pressure reflect only the capability of the pressure-containing envelope and not the force transmitting capability of mounting configurations.

The ordinary use of telescopic cylinder will not require any coating since the telescopic stages are exposed to atmospheric agents only during the tip-up operation, if duration is below 2 hours.

Surface coatings can be supplied on request. H.S.PENTA warranty does not apply to any kind of corrosion of coated or non-coated parts.

When closed, leave the tipping control in descent position. The exposed surface of first moving stage may get rusty, but it will not affect the functionality of the cylinder.

Maximum extension speed less than 0.5 m/s.

Hydraulic oil temperature admitted between -40°C and +100°C.

In case the cylinders must be stored, do not remove the package. Store them in a dry place, not exposed to rain. Do not store the cylinders for more than 6 months.

User shall pay attention to stroke length, loading and cylinder mounting in order to avoid bending or buckling of the cylinder at any position.

<b>REMARKS</b>	<b>[2011.06.23] [2011.06.23]</b>

<b>REVISIONS</b>	
	01
	02