




Light duty cylinder, ball - pins

Part Number

3103701203001

Tipping weight

13-24 ton

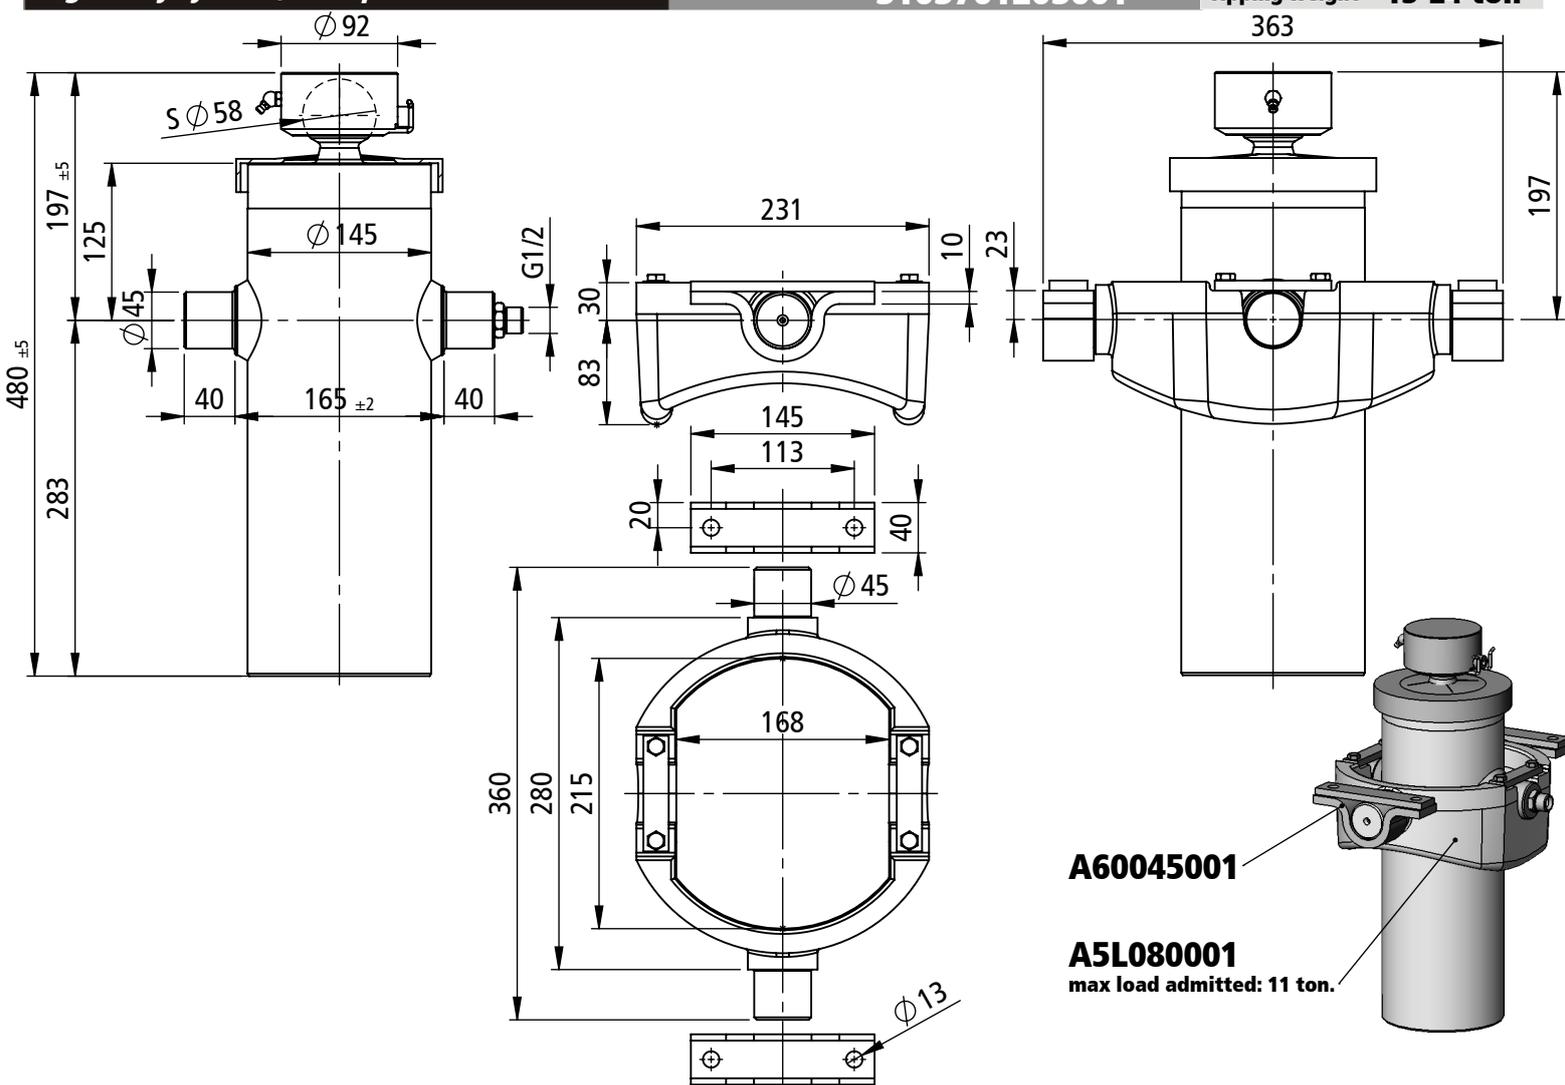

mounting dimension	197 mm + 20 mm min pull out	total stroke	900 mm	max pressure	200 bar
model: BL370 900 120 3	code: 3103701203001	weight: 38 kg	HS Penta		

extension	1	2	3	-	-	-	-	-	-	-	number of stages: 3
diameter [mm]	120	105	90	--	--	--	--	--	--	--	
stroke [mm]	305	304	291	--	--	--	--	--	--	--	total: 900 mm
thrust [kN]	226	173	127	--	--	--	--	--	--	--	max thrust admitted: 128 kN
oil [dm³]	3.4	2.6	1.9	--	--	--	--	--	--	--	total: 7.9 dm³

### TECHNICAL NOTES AND SPECIFICATIONS

- The normal application of telescopic cylinder is to lift up tipping bodies, loaded with different materials, and consequently discharge this material whilst the cylinder is extended all along its stroke.
- The body weight plus the max payload are the max tipping weight that can be raised by the cylinder. This value, calculated at the max pressure, is a rough indication of the tipping power of the cylinder and must be used as a first criteria for the selection of the cylinder. The real tipping mass can only be calculated by the design engineer of the dump truck, and must take into account the geometry of the dump body and operating conditions. Never exceed the maximum thrust.
- Never exceed maximum pressure.
- The cylinder has been designed for loads along the longitudinal axis: the cylinder is a lifting device only and may not be used as structural member or be subject to side load.
- The ordinary use of telescopic cylinder does not require any coating as the telescopic stages are exposed to atmospheric agents only during the tip-up operation. Therefore telescopic cylinders will be supplied without any coating in absence of any specific requirements.
- H.S.PENTA warranty does not apply to any kind of corrosion of coated or non-coated parts. See terms of warranty.
- Maximum extension speed less than 0.2 m/s.
- Hydraulic oil temperature admitted between -40°C and +100°C.
- In case the cylinders must be stored, do not remove the package. Store them in a dry place, not exposed to rain. Do not store the cylinders for more than 6 (six) months.
- Further specifications see mounting instructions, hydraulic oil specification sheet, user & maintenance manual.

#### REMARKS

[2011.06.07] [2011.06.07]

Old code: BL083 (Codice vecchio: BL083)

#### REVISIONS

2011.09.12 - Modificato ingombro totale e corsa	01
2011.11.23 - Inserito manicotto	02
2012.07.23 - Eliminata borchia ent. olio	03
	04